



Please scan this QR with your mobile phone camera to complete the return process.

We require this to be completed before collection. Thank you.




Step 1 - Locate and unpack the transmitters. Ensure the radio antennas are screwed in and upright. (Please hold onto the packaging)
Our headphones can switch between up to 3 channels so we send out 3 transmitters per hire.



Step 2 - Turn the transmitters to LOW for 200 meters effective range. Turn switch to HIGH for 500 meters effective range. Then connect the power cables and plug into a power socket.

Please ensure the first transmitter you setup is set as CH1 (Channel 1).

Step 3 - Please ensure that each transmitter you setup is set to a different channel.
Press the button to switch between the channels.

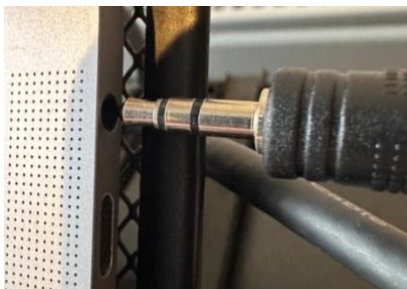

Step 4 -

Connect the AUX cable to your audio device through the headphone socket. The audio device can be your phone, mp3 player, laptop, stereo or other.

Repeat STEP 1 to STEP 4 with the remaining two transmitters. The second transmitter setup should be set to CH2 (Channel 2) and then the third to CH3 (Channel 3). All transmitters need to be connected to a different audio device. The listener will now be able to flick between the audio on the 3 channels when the music is playing.

Keep transmitters elevated and spaced apart (around 1-2 metres) from each other using separate power supplies where possible.

Step 5 – Unfold the headphones, switch to ON.

Switch between the channels here.



Step 6 - Adjusting Headphone Volume

Adjust the volume of the headphones using the VOL. control slider. For best quality sound, increase the volume on the audio device and allow the listener to control the volume on their headphones.

Top Tip – Use the highest media quality possible when playing/streaming music and the equaliser (EQ) settings on your device can be used to fine tune if required.

Replacement cost.

- 3 x Transmitters/ Aerials - £120 each
- 3 x Mains Plugs - £25 each
- 3 x Red & White Audio Jack Lead - £15 each
- 3 x Cases & foam - £45 each
- 4 x Protective Foam Per Box - £12 each
- 1 x 4 Way Charger - £25
- Headphone - £50 per headphone
- 1 x Storage box - £40
- Phone adaptors - £15 each
- Missed collection - £35 - £85

TURN OFF AFTER - DO NOT GET WET

PLEASE RETURN IN THE SAME CONDITION AS RECEIVED & DO NOT PUT STICKERS ON THE HEADPHONES. PLEASE SWITCH OFF THE HEADPHONES WHEN FINISHED.

RETURNING THE KIT.

1. Switch off all the headphones and transmitters.
2. Pack the transmitters away in their protective foam and cases.
3. Place the headphones back neatly and folded like in the photo to the right.
4. In your wallet you will find cable ties and return labels.
5. Remove the old label addressed to you. Please also check there are no other labels addressed to you, if so please remove them.
6. Stick the new labels in the same place as the old labels (see photo).
7. Cable tie each corner of the box, making sure they click into lock.
8. For our insurance we will need photos of the secure and labelled boxes. This protects both yourself and us while kit is in transit.



THANK YOU FOR HIRING
FROM SILENT DISCO 4 HIRE